

ARES-S5II	24CH Mode1	21CH Mode2	DMX Value	Funciton
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---3 4---103 104---107 108---207 208---212 213---225 226---238 239---251 252---255	Closed Slow Strobe--->Fast Strobe Open Slow Pulsation--->Fast Pulsation Open Random Slow Strobe Random Medium Strobe Random Fast Strobe Open
Color1	4	3	0---9 10---19 20--- 29 30--- 39 40---49 50---59 60---69 70---79 80---89 90---99 100--- 109 110---119 120---129 130---139 140---149 150---159 160-- 207 208---255	White Color1+White Color1 Color1 + Color2 Color2 Color2 + Color3 Color3 Color3 + Color4 Color4 Color4 + Color5 Color5 Color5 + Color6 Color6 Color6 + Color7 Color7 Color7 + WHITE CW Rotation Slow--->Fast CCW Rotation Fast--->Slow
Color2	5	4	0---9 10---19 20--- 29 30--- 39 40---49 50---59 60---69	White Color1+White Color1 Color1 + Color2 Color2 Color2 + Color3 Color3

			70---79	Color3 + Color4
			80---89	Color4
			90---99	Color4 + Color5
			100--- 109	Color5
			110---119	Color5 + Color6
			120---129	Color6
			130---139	Color6 + Color7
			140---149	Color7
			150---159	Color7 + WHITE
			160-- 207	CW Rotation Slow--->Fast
			208---255	CCW Rotation Fast--->Slow
NULL	6	5		
NULL	7	6		
NULL	8			
Fixed Gobo	9	7	0---3	WHITE
			4---7	GOBO 1
			8---11	GOBO 2
			12---15	GOBO 3
			16---19	GOBO 4
			20---23	GOBO 5
			24---27	GOBO 6
			28---31	GOBO 7
			32---35	GOBO 8
			36---39	GOBO 9
			40---76	CW SlowRotation----->FastRotation
			77---84	WHITE
			85---121	CCW SlowRotation-----> FastRotation
			122---137	GOBO 1 Shake Slow---->Fast
			138---153	GOBO 2 Shake Slow---->Fast
			154---169	GOBO 3 Shake Slow---->Fast
			170---185	GOBO 4 Shake Slow---->Fast
			186---201	GOBO 5 Shake Slow---->Fast
			202---217	GOBO 6 Shake Slow---->Fast
			218---223	GOBO 7 Shake Slow---->Fast
			224---239	GOBO 8 Shake Slow---->Fast
			240---255	GOBO 9 Shake Slow---->Fast

Gobo1 Select	10	8	0---5 6---10 11---16 17--- 22 23---28 29---34 35---40 41---52 53---70 71---88 89---106 107--124 125---142 143---160 161---178 179---217 218---255	WHITE GOBO1 GOBO2 GOBO3 GOBO4 GOBO5 GOBO6 GOBO7 GOBO1 Shake Slow---->Fast GOBO2 Shake Slow---->Fast GOBO3 Shake Slow---->Fast GOBO4 Shake Slow---->Fast GOBO5 Shake Slow---->Fast GOBO6 Shake Slow---->Fast GOBO7 Shake Slow---->Fast CW SlowRotation----->FastRotation CCW FastRotation-----> SlowRotation
GOBO1 index Rotation	11	9	0---127 128---191 192---255	Position 0° ---->360° (FINE in CH9) <b>CW SlowRotation-----&gt; FastRotation</b> <b>CCW FastRotation-----&gt;SlowRotation</b>
GOBO1 indexRotation FINE	12		0---255	GOBO1 index Rotation FINE
FORST	13	10	0---127 128--255	EXCLUDED INSERTED
PRISM2	14	11	0---127 128--255	EXCLUDED INSERTED
PRISM2 Rotation	15	12	<b>0---127</b> <b>128---190</b> <b>191---194</b> <b>195---255</b>	<b>Position 0° ----&gt;360°</b> <b>CW FastRotation-----&gt; SlowRotation</b> <b>STOP</b> <b>CCW Slow Rotation-----&gt;Fast Rotation</b>
FOCUS	16	13	0---255	
ZOOM	17	14	0---255	
PAN(X)	18	15	0---255	
PAN(X) FINE	19	16	0---255	
TILTE(Y)	20	17	0---255	
TILTE(Y) FINE	21	18	0---255	
P/T SPEED	22	19	0---128 129---170 171---211 212---255	Fastest----->Slowest Slow Speed ( 1/3 MaxSpeed) Medium Speed ( 1/2 MaxSpeed) Fast Speed (Fastest Speed)
Lamp Control	23	20	0---32 33---64 65---96 97---128	Undefined Undefined Undefined Undefined

			129---160 161---193 194---225 226---255	Undefined Undefined Undefined Undefined
Control	24	21	0---127 128---255	Undefined Reset ALL( >4s)

\*NOTE:关闭灯泡后，请勿立即又打开灯泡，请等待大于 2 分钟之后再点灯泡。如果无法点亮灯泡，试试给灯泡一次“关灯泡”信号，然后再去点灯泡。