

SEER4000WASH	18CH MODE1	16CH MODE2	DMX VALUE	FUNCTION
Dimmer	1	1	0--255	Brightness--->Darkness
Dimmer FINE	2		0--255	
Strobe,Shutter	3	2	0---3 4---103 104---107 108---207 208---212 213---225 226---238 239---251 252---255	Close Slow Strobe--->Fast Strobe Open SlowPuls---->Fast Puls Open Random Slow Strobe Random Medium Strobe Random Fast Strobe Open
Color1	4	3	0---11 12---23 24--- 35 36--- 47 48--- 59 60---71 72--- 83 84---95 96---107 108---119 120--- 131 132---143 144---155 156--- 171 172--- 213 214--- 255	White Color1+White Color1 Color1 + Color2 Color2 Color2 + Color3 Color3 Color3 + Color4 Color4 Color4 + Color5 Color5 Color5 + Color6 Color6 Color6 + White CW Rotation Slow--->Fast CCW Rotation Fast--->Slow
Color2	5	4	0---11 12---23 24--- 35 36--- 47 48--- 59 60---71	White Color1+White Color1 Color1 + Color2 Color2 Color2 + Color3

			72--- 83 84---95 96---107 108---119 120--- 131 132---143 144---155 156--- 171 172--- 213 214--- 255	Color3 Color3 + Color4 Color4 Color4 + Color5 Color5 Color5 + Color6 Color6 Color6 + White CW Rotation Slow--->Fast CCW Rotation Fast--->Slow
Cyan	6	5	0---255	EXCLUDED---->INSERTED
Magenta	7	6	0---255	EXCLUDED---->INSERTED
Yellow	8	7	0---255	EXCLUDED---->INSERTED
CTC	9	8	0---255	EXCLUDED---->INSERTED
Color Macro	10		0---255	
Forst	11	9	0--255	
PAN(x)	12	10	0---255	
PAN(X) FINE	13	11	0---255	
TILTE(Y)	14	12	0---255	
TILTE(Y) FINE	15	13	0---255	
P/T Speed	16	14	0---128 129---170 171---211 212---255 252---255	Fastest----->Slowest SlowSpeed (1/3 MaxSpeed) MediumSpeed (1/2 MaxSpeed) Fast Speed (Fastest Speed) Darkness when moving
Lamp Control	17	15	0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255	Undefined LAMP OFF(> 3s) Undefined LAMP ON(> 3s) Undefined LOW POWER(> 3s) Undefined FULL POWER(> 3s)

Control	18	16	0---127	Undefined
			128---153	Undefined
			154---179	Undefined
			180---205	Undefined
			206---231	Undefined
			232---255	Reset ALL(> 3s)

*NOTE:关闭灯泡后，请勿立即又打开灯泡，请等待大于 2 分钟之后再点灯泡。如果无法点亮灯泡，试试给灯泡一次“关灯泡”信号，然后再去点灯泡。