

Eos-S19	16CH Mode1	DMX Value	Function
Dimmer	1	0---255	Darkness----->Bright
Strobe	2	0---7 8---63 64---71 72---127 128---133 134---189 190--195 196--250 251--255	Undefined Fast Strobe----->Slow Strobe Undefined Fast Pulsation Slow Close--->Fast Pulsation Fast Close Undefined Slow Pulsation Fast Close--->Fast Pulsation Fast Close Undefined Random Strobe Undefined
Red	3	0---255	Darkness----->Bright
Green	4	0---255	Darkness----->Bright
Blue	5	0---255	Darkness----->Bright
White	6	0---255	Darkness----->Bright
Focus	7	0---255	
Focus Rotation	8	0---127 128---191 192---255	0° ----->360° CW Rotation Fast---->Slow CCW Rotation Slow--->Fast
Pan	9	0---255	
Pan FINE	10	0---255	
Tilt	11	0---255	
Tilt FINE	12	0---255	
P/T Speed	13	0---128 129---170 172---211 212---255	Fastest Speed----->Slowest Speed Slow Speed (1/ 3 max speed) Medium Speed (2/ 3 max speed) Fast Speed
Control	14	0---130 131---155 128---255	Undefined Undefined Reset ALL
Macro	15	0---10 11---21 22---32 33---43 44---54 55---65 66---76 77---87 88---98 99---109 110---120 121---131	Undefined Macro1 Macro2 Macro3 Macro4 Macro5 Macro6 Macro7 Macro8 Macro9 Macro10 Macro11

		132---143	Macro12
		144---154	Macro13
		155--- 165	Macro14
		166--- 176	Macro15
		177--- 187	Macro16
		188--- 198	Macro17
		199--- 209	Macro18
		210---220	Macro19
		221--- 231	Macro20
		232--- 242	Macro21
		243---255	Macro22
Macro Speed	16	0---255	Slowest--->Fastest